 




ACCUTUBE USER GUIDE

TUBE PREPARATION





DIRECT FILL

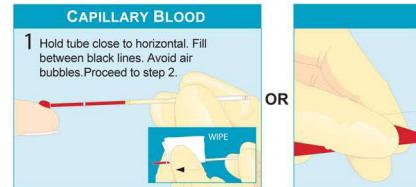


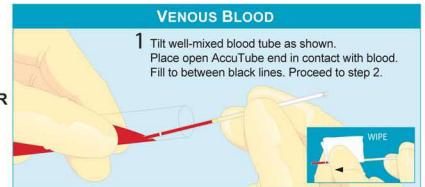


PIPETTER FILL

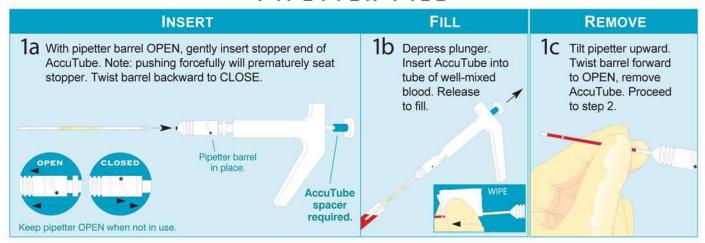

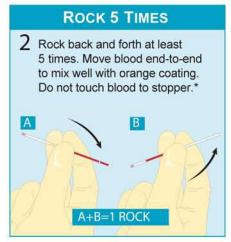

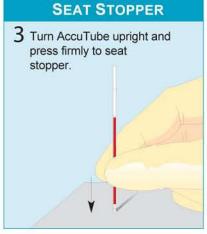

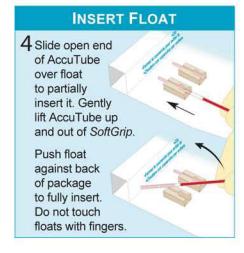



^{*}If blood stops moving, loosen or remove stopper and finish mixing. Reinsert stopper.




ACCUTUBE USER GUIDE

CENTRIFUGATION AND READING

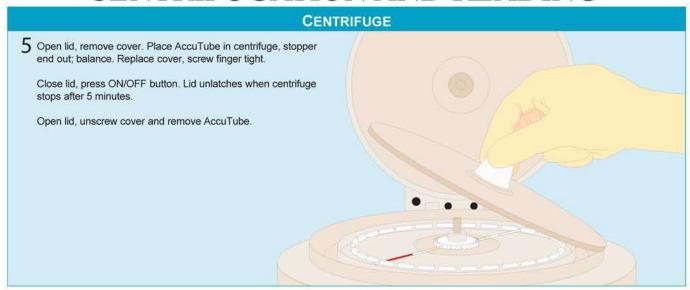


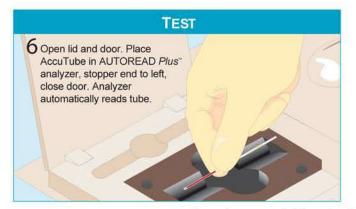

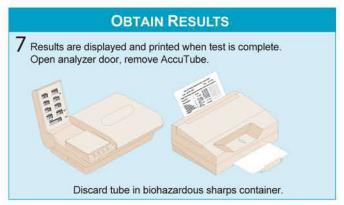

See Operator's/Service Manual for further instructions.

ACCUTUBE SPACER PLACEMENT

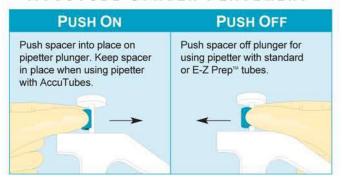

PIPETTER BARREL REPLACEMENT

